



SENTINEL SCREEN


ASSEMBLY INSTRUCTIONS



1. Check that you have all the hardware needed.

- (9) 1/2" - 13, 2" L Carriage Bolt
- (9) 1/2" - 13 Locknut
- (1) Nylon Net
- (4) Foam Padding
- (5) Bungee Balls
- 1/4" Rope
- Vinyl

2. Assemble the screen as shown in the diagram. **If you have also purchased a Wheel Kit, see the next page for instructions. (Wheel Kit sold separately)**

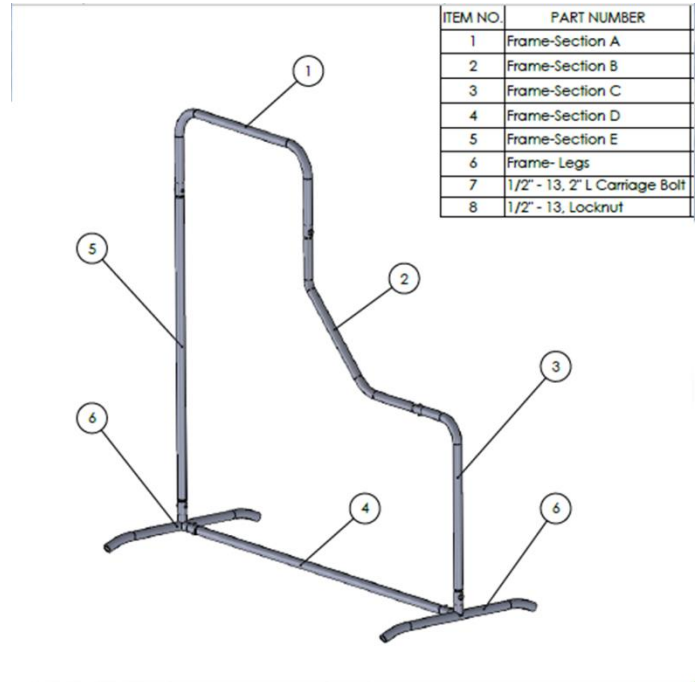

3. At each connection point, secure the frame with a Carriage Bolt and Locknut.

The carriage bolts should sit flush in the holes in the screen's poles.

4. Once the frame is constructed and secured, you can put the netting over the frame.

- Open the netting completely and lay it on the ground.
- Look for the opening at the bottom of the netting.
- Pull the net over the top of the L-Screen frame all the way to the bottom.
- Secure the netting with bungee balls to Frame Section D.

5. Once the net is tightly secured, you can add foam pieces around the frame. There is no padding for the bottom of the frame.

6. Once the foam padding is around the frame (you cut excess foam off if necessary) you can begin to wrap the vinyl around the foam. This step is best done with two people. One person should hold the vinyl tightly around the foam padding, while the other person laces the vinyl with the rope provided.

7. With the rope provided bring the vinyl together through each of the eyelets, similar to lacing a shoe. To lace the vinyl, start on the bottom of the screen and work your way up and around.

8. Repeat this step until the vinyl is completely laced. (You may have to bend the vinyl at each corner to make sure it is secured tightly). Tie off the end of the rope with a knot.